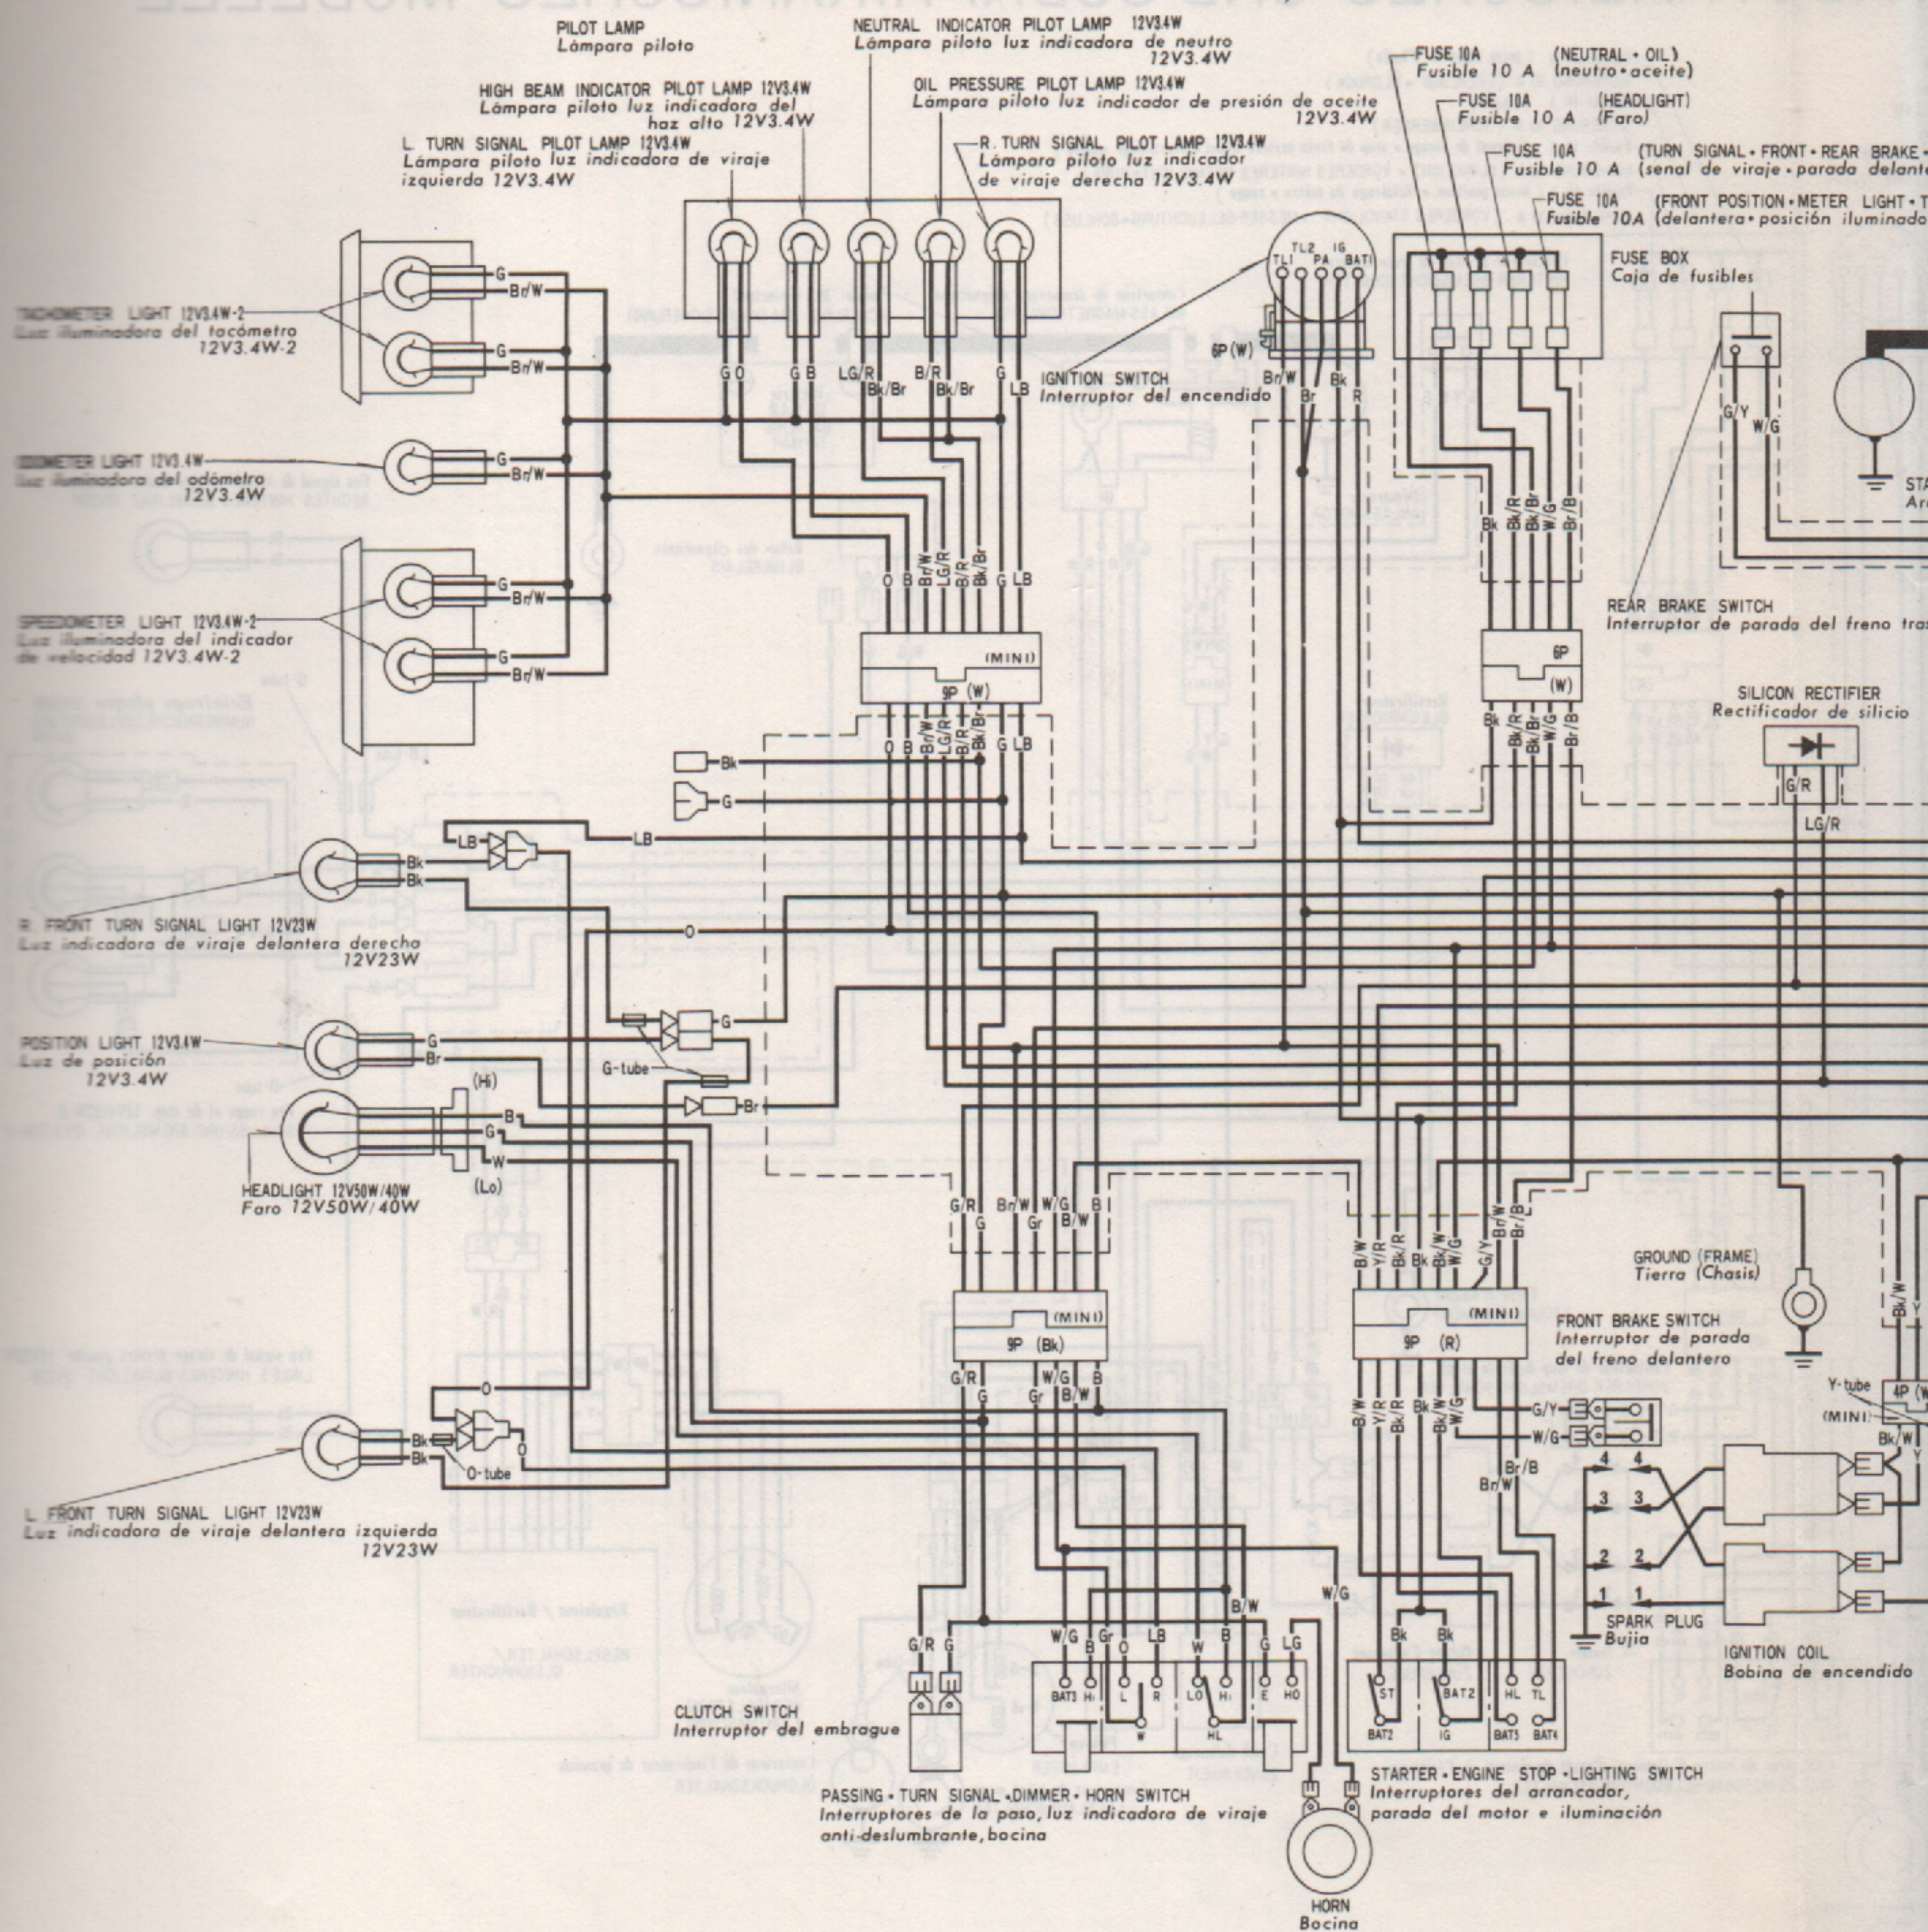


**HONDA**
CB750KGENERAL INFORMATION
INFORMACION GENERAL

WIRING DIAGRAMS, DE LOS HILOS DE DISTRIBUCION

CB750K GENERAL, AUSTRALIAN AND S
TIPOS GENERAL, AUSTRALIANO Y SUDIGNITION SWITCH CONTINUITY
Conexión de los interruptores
de encendido

	BAT1	IG	TL1	TL2	P
OFF					
ON	○	○	○	○	
P	○				○

STARTER-ENGINE STOP-LIGHTING SWITCH CONTINUITY
Conexión de los interruptores del arrancador,
parada del motor e iluminación

	BAT4	TL	BAT5	HL	IG	BAT2	ST	BAT2
•					OFF		FREE	
P	○				RUN	○	PUSH	○
HL	○	○			OFF			

PASSING-TURN SIGNAL-DIMMER-HORN SWITCH CONTINUITY
Conexión de los interruptores del paso,
luz indicadora de viraje, anti-deslumbrante, bocina

	W	R	L	HL	LO	Hi	HO	E	BAT3	H
R	○	○		LO	○		FREE		FREE	
N				(N)	○		PUSH	○	PUSH	○
L	○			Hi	○					